

SmartCoil Gas Pipe Handling Guide

Removing Outer Wrap with Rip Cord

1. Begin unpackaging the palletized coils by removing only the green outer stretch wrap using the provided rip cord. **Do not remove the clear wrap securing the individual coils.**
2. The orange rip cord is located underneath the green pallet wrap and the loose end is secured with a rip cord label on the outside of the pallet for quick identification.
3. Grasp the orange rip cord firmly and pull it through the securing label.
4. Continue pulling to begin tearing through the green film until desired number of coils are accessible.
5. Only tear through the green film to the location needed for current use. The remainder of the green film should stay intact to assist in keeping the coil stack stable if movement is needed.
6. When ready, tear through the last of the green film to access the last coil. The orange rip cord is secured to the pallet and can be removed and discarded.



Pallet wrapped with green outer wrap.



Rip cord location.



Pull through label.



Continue pulling to tear through green wrap.



Stop pulling when desired number of coils are accessible.



When ready, tear through remaining coils and discard rip cord.

Removing Individual Coils from Pallet

1. Remove individually wrapped coils from pallet one at a time and carry or roll them to desired location in the field. **Do not remove the clear wrap securing the individual coils.**



Individually wrapped coils on pallet.



Roll or carry to location in the field.

Unwinding Coils

1. Unwind coil by first locating the inside pipe end. Pull it out in the direction it is pointing.
2. **Do not remove, pull back, or peel off the plastic wrap. Cutting away the wrap to expose the inner or outer layer of pipe can reduce the structural integrity of the coil.**



Locate inner pipe and pull out.



Continue pulling in direction the pipe is pointing.



Do not cut wrap from top.



Do not cut wrap from bottom.